 


REPAIR PART PRICE LIST

McWhorter Lime and Fertilizer Sowers

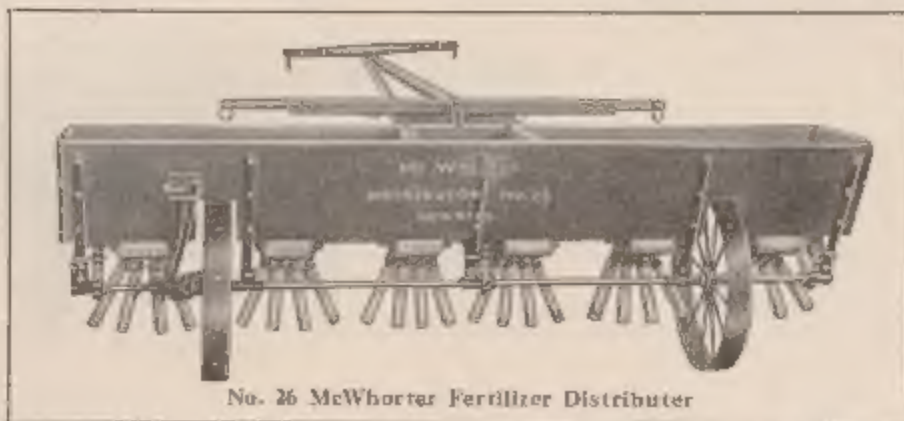

No. 26 McWhorter Fertilizer Distributor

| | |
|--------------------------------------|--------|
| Nos. 13C, 13D, 26, 34 and 14 | Page 2 |
| Nos. 13, 13A, 13B, 14, 16, 17 and 24 | " 3 |
| Nos. 11 and 12 | " 5 |
| Old Style and 21 | " 7 |

BATEMAN AND COMPANIES, INC.

347 MADISON AVENUE, NEW YORK CITY

MANUFACTURING DIVISIONS

Bateman Mfg. Co., Grenloch, N. J.
 Belcher & Taylor A. T. Co., Chicopee Falls, Mass.
 The Cutaway Harrow Co., Higganum, Ct.
 Duane H. Nash, Inc., Millington, N. J.
 The Richardson Mfg. Co., Worcester, Mass.
 The Bateman-Wilkinson Co., Ltd., Toronto, Can.

DISTRICT SALES HEADQUARTERS

Bateman and Companies, Inc., New York City
 Bateman and Companies, Inc., Grenloch, N. J.
 Bateman and Companies, Inc., Chicopee Falls, Mass.
 Bateman and Companies, Inc., Worcester, Mass.
 The Bateman-Wilkinson Co., Ltd., Toronto, Can.

BRANCH AND DISTRIBUTING HOUSES

Presque Isle, Me.
 Burnham, Me.
 Worcester, Mass.
 Chicopee Falls, Mass.
 Wallingford, Conn.
 Higganum, Conn.
 Canastota, N. Y.
 Millington, N. J.

Grenloch, N. J.
 Raleigh, N. C.
 Columbia, S. C.
 Savannah, Ga.
 Atlanta, Ga.
 Montgomery, Ala.
 Mobile, Ala.
 Orville, Ohio.
 Cincinnati, Ohio

Lansing, Mich.
 Minneapolis, Minn.
 Milwaukee, Wis.
 Davenport, Ia.
 Kansas City, Mo.
 Memphis, Tenn.
 New Orleans, La.
 Jacksonville, Fla.
 Houston, Texas

Denver, Colo.
 Salt Lake City, Utah
 Spokane, Wash.
 Portland, Ore.
 San Francisco, Calif.
 Stockton, Calif.
 Los Angeles, Calif.
 Toronto, Canada

GENERAL FULL LINE EXHIBITION

Grand Central Palace :: 46th Street and Lexington Avenue :: New York City

Form A25—Nov. '20



Prices subject to change without notice.

 
Destroy old lists.

INSTRUCTIONS FOR ORDERING PARTS

WRITE your name and complete address plainly, also state where you wish the repairs shipped and how, either by Parcel Post, Express or Freight. Unless orders instruct us to insure goods, Parcel Post shipments are made at the customer's risk.

Give the number on the part wanted, also the number, name and year model of the machine for which it is wanted.

If the part has no number, or it is defaced so it cannot be given, order by the description, always being sure to give number, name and year model of machine for which it is wanted. For instance: No. D-36 for No. 14 Fertilizer Distributor, Model 1907; or Belt for Feeding Fertilizer with Links at Ends of Bars for No. 21 Hand Fertilizer Distributor, Model 1905.

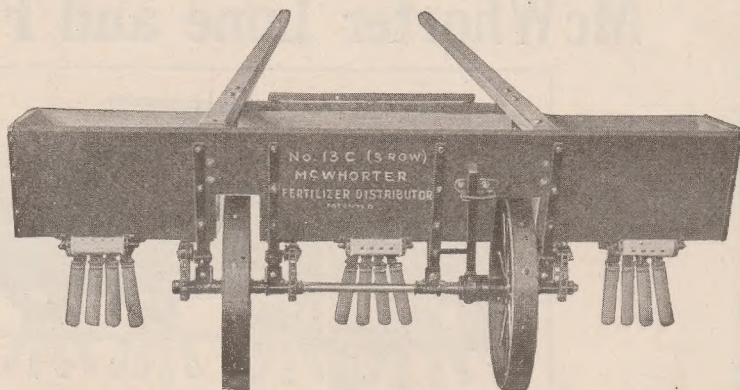


No. 13C

When not specified particularly in the description for which machine a part is for, it will fit on any machine named in the group in which it is listed.

R. H. and L. H. mean Right Hand and Left Hand. When designating Right or Left Hand, stand facing the way the machine runs.

 In case of doubt as to the correct name or description of part wanted, or if you do not find the part listed, it is advisable to send old parts, with transportation charges prepaid, to us to be duplicated. Be sure to tag each piece with your name and address and notify us by letter, explaining just what you want, how you are sending the part, either by Parcel Post, Express or Freight. Also state if you wish old part returned to you.

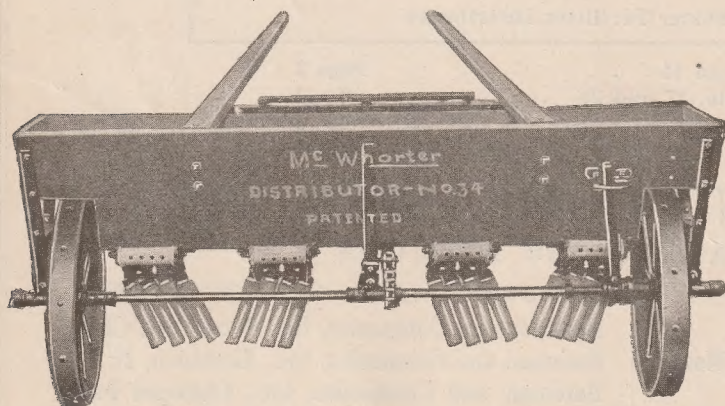


No. 34

PARTS CLAIMED DEFECTIVE

Under no circumstances will claims for defects be allowed unless parts claimed defective are returned, transportation charges prepaid, to the factory for our inspection.

When shipping parts for inspection, see that each piece is tagged with shipper's name and address, and advise us fully by letter.

 In cases of declined claims, the inspected parts are subject to the shipper's orders for disposition, and Bateman and Companies, Inc., cannot be responsible for such parts for more than 30 days, at the expiration of which they will be scrapped without credit to the shipper. Shippers accept these conditions when shipping parts.

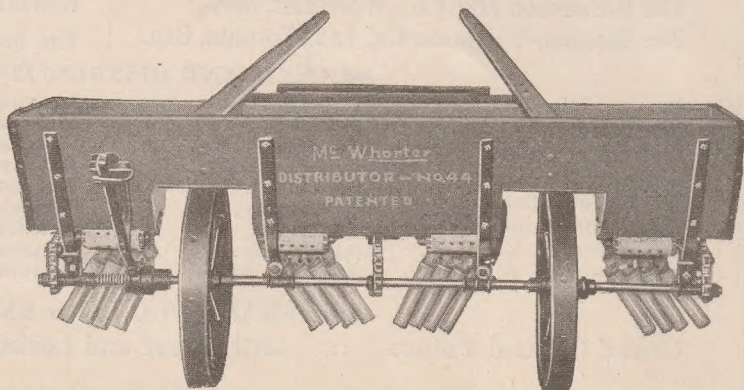

No. 44

Repair Parts for McWhorter Nos. 13C, 13D, 26, 34 and 44

Low Down Fertilizer Distributers

| | REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|--|--------------|-------|--------|--------|-----|
| | | | | LBS. | OZ. |
| Lower Belt Guide..... | | D 3 | \$0.20 | | 4 |
| Upper Belt Guide..... | | D 8 | .30 | | 7 |
| Upper Belt Guide..... | | D 9 | .30 | | 7 |
| Sprocket for Ends of Belt Axle on No. 13 C and No. 13 D Distributer..... | | D 24 | .60 | 1 | 1 |
| Holder for Feed Gate Spring..... | | D 20 | .20 | | 4 |
| Collar for 1 inch Main Axle Spring..... | | D 56 | .30 | | 7 |
| Box on Main Axle for Wheel Standards..... | | D 65 | .70 | 1 | 5 |
| Chain Tightener..... | | D 68 | .45 | | 13 |
| Roller for Above..... | | D 69 | .65 | 1 | 2 |
| Flange Collar for 1 inch Main Axle..... | | D 78 | .45 | | 12 |
| Side Belt Guide on No. 13 D Distributer..... | | D 82 | .95 | 1 | 10 |
| Side Belt Guide on No. 13 D Distributer..... | | D 83 | .95 | 1 | 9 |
| Side Belt Guide on No. 13 D Distributer..... | | D 84 | .95 | 1 | 10 |
| Side Belt Guide on No. 13 D Distributer..... | | D 85 | .95 | 1 | 10 |
| Side Belt Guide on No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 86 | .70 | 1 | 4 |
| Side Belt Guide on No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 87 | .70 | 1 | 4 |
| Side Belt Guide on No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 88 | .70 | 1 | 4 |
| Side Belt Guide on No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 89 | .70 | 1 | 7 |
| Casting Holding Ends of Belt Axle..... | | D 90 | .70 | 1 | 4 |
| Half Collar Over D 93..... | | D 91 | .45 | | 13 |
| Sprocket on 1 inch Main Axle..... | | D 92 | .60 | 1 | |
| Gear Clutch on Axle..... | | D 93 | 1.30 | 2 | 4 |
| Gear Clutch on Hub of Wheel for No. 13 C, No. 13 D, No. 26 and No. 34 Distributers..... | | D 94 | 1.20 | 2 | |
| Washer on Under Side of Single Tree..... | | D 98 | .15 | | 3 |
| Spout Frame for No. 13 Distributer..... | | D 99 | 3.60 | 6 | 12 |
| Front L. H. Top Piece for Spout..... | | D 102 | .15 | | 3 |
| Rear L. H. Top Piece for Spout..... | | D 103 | .15 | | 3 |
| Front R. H. Top Piece for Spout..... | | D 104 | .15 | | 3 |
| Rear R. H. Top Piece for Spout..... | | D 105 | .15 | | 3 |
| Spout Frame for No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 106 | 1.60 | 2 | 15 |
| With Spouts, Complete..... | | D 106 | 4.80 | 5 | |
| Chain Tightener..... | | D 107 | .50 | | 13 |
| Front Hopper Standard on No. 44 Distributer, L. H..... | | D 108 | .60 | 1 | 1 |
| Front Hopper Standard on No. 44 Distributer, R. H..... | | D 109 | .60 | 1 | 1 |
| Feed Gate for No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 110 | .60 | 1 | |
| Front Roller Sprocket for Belts on No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | D 111 | 1.20 | 1 | 15 |
| Clutch Sleeve for L. H. Wheel, No. 44 Distributers..... | | D 112 | 2.80 | 4 | 10 |
| Piece for connecting Ends of Tongue..... | | D 113 | .50 | | 13 |
| Sprocket on End of Belt Axle for No. 26, No. 34 and No. 44 Distributers..... | | D 114 | 1.05 | 1 | 13 |
| Latch for Gear Lever..... | | E 28 | .40 | | 11 |
| Spout for No. 13 D Distributer, L. H..... | | K 2 | .30 | | 7 |
| Spout for No. 13 D Distributer, R. H..... | | K 3 | .30 | | 7 |
| Feed Gate for No. 13 D Distributer..... | | T 28 | 1.05 | 1 | 12 |
| Back Roller for Belts with Rivet and Cotter..... | | T 97 | .15 | | 3 |
| Front Roller Sprocket for Belts on No. 13 D Distributer..... | | T 284 | 1.30 | 2 | 4 |
| Rubber Spout..... | | | .45 | | 2 |
| Bolt and Brass Thumb Nut for Holding Spout to Frame..... | | | .10 | | 1 |
| Spring on Main Axle..... | | | .30 | | 2 |
| Spring for Regulating Feed Gates D 110 or T 28..... | | | .15 | | 1 |
| Belt for Feeding Fertilizer with Loops at Ends of Bars for No. 13 C, No. 26, No. 34 and No. 44 Distributers..... | | | 4.00 | 3 | 7 |
| Belt for Feeding Fertilizer with Loops at Ends of Bars for No. 13 D Distributer.. | | | 5.00 | 4 | 4 |
| Chains for Driving Belts on No. 13 C and No. 13 D Distributers..... | | | .50 | | 11 |
| Chains for Driving Two Outside Belts on No. 26 and all Belts on No. 44 Distributers | | | .55 | | 12 |
| Chains for Driving Four Inside Belts on No. 26 and all Belts on No. 34 Distributers | | | .65 | | 15 |
| Single Tree Bar..... | | | 1.10 | 2 | 15 |
| Single Tree Bar with S 1 and S 2 Hooks..... | | | 1.60 | 3 | 8 |
| Shafts with Britchen Fastener for No. 13 C, No. 13 D, No. 34 and No. 44 Distributers | | | 6.00 | 11 | |
| Tongue for No. 26 Distributer, each piece..... | | | 5.50 | 10 | 7 |
| Wheels for No. 13 C, No. 13 D and No. 34 Distributers..... | | | 6.00 | 26 | 8 |

Repair Parts for McWhorter Nos. 13C, 13D, 26, 34 and 44 Low Down Fertilizer Distributers—Continued

| REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|---|-----|--------|--------|-----|
| | | | LBS. | OZ. |
| Wheels for No. 26 Distributer..... | | \$7.00 | 30 | |
| Wheels for No. 44 Distributer R. H..... | | 6.50 | 27 | |
| Wheels for No. 44 Distributer, L. H..... | | 6.50 | 27 | |
| Neck Yoke for No. 26 Distributer..... | | 2.00 | 5 | 7 |
| Double Trees for No. 26 Distributer..... | | 6.00 | 13 | |
| Bolt with Thumb Nut for Regulating D 110 or T 28..... | | .15 | | 2 |

Repair Parts for McWhorter Nos. 13, 13A, 13B, 14, 16, 17 and 24 Fertilizer Distributers

| REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|--|--------------------|--------|--------|-----|
| | | | LBS. | OZ. |
| Back Roller for Belts..... | D 1 | \$0.40 | | 11 |
| Wheel Hub for $1\frac{3}{16}$ inch Axle..... | D 2 | .80 | 1 | 5 |
| Lower Belt Guide..... | D 3 | .20 | | 4 |
| Side Belt Guide..... | D 4 | .85 | 1 | 8 |
| Side Belt Guide..... | D 5 | .85 | 1 | 6 |
| Side Belt Guide..... | D 6 | .85 | 1 | 6 |
| Side Belt Guide..... | D 7 | .85 | 1 | 7 |
| Upper Belt Guide..... | D 8 | .30 | | 7 |
| Upper Belt Guide..... | D 9 | .30 | | 7 |
| Back Stand for Hopper..... | D 10 | 1.00 | 1 | 10 |
| Box for Wheel Standards on $1\frac{3}{16}$ inch Main Axle..... | D 11 | .75 | 1 | 4 |
| Feed Gate..... | D 12 | .50 | | 12 |
| Front Roller Sprocket for Belts..... | D 13 | 1.00 | 1 | 10 |
| Hopper End, Lower R. H..... | D 14 | 1.80 | 3 | 1 |
| Hopper End, Upper R. H..... | D 14 $\frac{1}{2}$ | 2.25 | 3 | 13 |
| Hopper End, Lower L. H..... | D 15 | 1.80 | 3 | |
| Hopper End, Upper L. H..... | D 15 $\frac{1}{2}$ | 2.25 | 3 | 6 |
| Spout Frame for No. 16 Distributer..... | D 16 | 2.25 | 3 | 13 |
| Sprocket for Center of Belt Axle (9 teeth)..... | D 19 | 1.40 | 2 | 5 |
| Holder for Feed Gate Spring..... | D 20 | .20 | | 4 |
| Casing for Gear on $1\frac{3}{16}$ inch Main Axle..... | D 21 | 1.40 | 2 | 6 |
| Bearing for Center of Belt Axle..... | D 22 | .60 | 1 | |
| Sprocket for Agitator Axle..... | D 23 | 1.25 | 2 | 2 |
| Sprocket for End of Belt Axle..... | D 24 | .65 | 1 | 1 |
| Sprocket for Center of $1\frac{3}{16}$ inch Main Axle (6 teeth)..... | D 25 | 1.20 | 2 | |
| Collar for Belt Axle..... | D 26 | .30 | | 7 |
| Clutch for Center of $1\frac{3}{16}$ inch Main Axle..... | D 27 | .55 | | 15 |
| Tightener for Main Drive Chain..... | D 28 | 1.25 | 2 | 2 |
| Latch for Gear Lever..... | D 29 | .30 | | 7 |
| Stay for Agitator Axle..... | D 30 | .40 | | 11 |
| Tightener for Agitator Drive Chain..... | D 31 | .35 | | 9 |
| Agitator Finger..... | D 35 | .25 | | 6 |
| Spout Frame for Nos. 13, 13 A, 13 B, 14, 16, 17 and 24 Distributers..... | D 36 | 2.60 | 4 | 7 |
| Casing for Sprocket on Agitator Axle of No. 16 Dist L. H. Half..... | D 37 | .85 | 1 | 7 |
| Casing for Sprocket on Agitator Axle of No. 16 Dist. R. H. Half..... | D 38 | .85 | 1 | 8 |
| Sprocket on Hub of Left Wheel for Driving Agitator Axle..... | D 39 | .60 | 1 | |
| Fertilizer Regulator..... | D 40 | .25 | | 6 |
| Tightener for Agitator Chain..... | D 41 | .55 | | 14 |
| Collar for Belt on Agitator Axles..... | D 42 | .20 | | 4 |
| Piece for Connecting End of Tongue on No. 16 Distributer..... | D 43 | 1.00 | 1 | 10 |
| Clutch for Center of Main Axle..... | D 44 | .95 | 1 | 9 |
| Casing for Gear on $1\frac{3}{16}$ Main Axle..... | D 45 | 1.60 | 2 | 10 |
| Draw Piece for Single Tree of No. 16 Distributer..... | D 46 | .20 | | 4 |
| Casting for Back Ends of Tongue on No. 16 Distributer..... | D 47 | .30 | | 7 |
| Holder for Evener Roller..... | D 49 | .40 | | 11 |
| Roller for Evener..... | D 50 | .30 | | 8 |

Repair Parts for McWhorter Nos. 13, 13A, 13B, 14, 16, 17 and 24 Fertilizer Distributers—Continued

| REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|--|-------|--------|--------|-----|
| | | | LBS. | OZ. |
| Back Roller for Belts..... | D 51 | \$0.45 | | 12 |
| Wheel Hub for 1 inch Axle..... | D 54 | 1.10 | 1 | 7 |
| Wheel Hub with Flange for 1 inch Axle..... | D 54 | 1.20 | 1 | 9 |
| Front Roller Sprocket for Belts..... | D 55 | 1.00 | 1 | 11 |
| Collar for 1 inch Main Axle..... | D 56 | .30 | | 7 |
| Clutch for Center of 1 inch Main Axle..... | D 57 | 1.00 | 1 | 10 |
| Casing for Gear on 1 inch Main Axle..... | D 58 | 1.45 | 2 | 7 |
| Box for Wheel Standards on 1 inch Main Axle..... | D 59 | .80 | 1 | 6 |
| Sprocket on Hub of Left Wheel for Driving Agitator Axle..... | D 60 | .60 | 1 | |
| Casting for Back End of Wood Shafts..... | D 61 | .30 | | 7 |
| Collar for 1 inch Main Axle to hold Flange of Wheel..... | D 62 | .50 | | 13 |
| Sprocket for Center of Belt Axle (7 teeth)..... | D 63 | 1.20 | 2 | 2 |
| Sprocket for Center of 1 inch Main Axle (8 teeth)..... | D 64 | 1.45 | 2 | 7 |
| Box for Wheel Standards on 1 inch Main Axle..... | D 65 | .70 | 1 | 5 |
| Sprocket on Hub of Left Wheel for Driving Agitator Axle..... | D 66 | .65 | 1 | 2 |
| Sprocket for Center of $1\frac{3}{16}$ inch Main Axle (8 teeth)..... | D 67 | 1.20 | 2 | 10 |
| Chain Tightener..... | D 68 | .50 | | 13 |
| Roller for above..... | D 69 | .65 | 1 | 2 |
| Casting that Joins Front Angles on No. 16 and No. 24 Distributers..... | D 70 | 1.20 | 2 | 1 |
| Sprocket for Center of Belt Axle (18 teeth)..... | D 77 | 2.60 | 4 | 8 |
| Flange Collar for 1 inch Axle..... | D 78 | .45 | | 12 |
| Sprocket for Center of 1 inch Main Axle (6 teeth)..... | D 251 | 1.05 | 1 | 12 |
| Slide Casting for Evener Chain..... | A 17 | .60 | 1 | 1 |
| Slide Casting for Evener Chain..... | A 18 | .70 | 1 | 4 |
| Collar for $1\frac{3}{16}$ inch Main Axle..... | C 24 | .20 | | 5 |
| Concave Washer for Back Ends of Iron Shafts..... | E 1 | .15 | | 2 |
| Breast Strap Hook on Neck Yoke..... | E 12 | .30 | | 4 |
| Britchen Fastener on Iron Shafts..... | E 16 | .35 | | 3 |
| Piece for Fastening Neck Yoke to Tongue..... | E 17 | .60 | | 8 |
| Piece for Connecting Ends of Tongue..... | E 18 | .50 | | 7 |
| Trace Fastener on Ends of Single Trees, L. H..... | S 1 | .40 | | 5 |
| Trace Fastener on Ends of Single Trees, R. H..... | S 2 | .40 | | 5 |
| Spout, L. H..... | KK | .30 | | 8 |
| Spout, R. H..... | SS | .30 | | 9 |
| Spout Pins for Holding KK or SS to D 16 or D 36..... | | .05 | | 1 |
| Spout Holders, complete: 1 Spout Pin, 1 Spout Spring, 2 Special Washers, 1 Spring Cotter. For holding KK or SS to D 16 or D 36..... | | .20 | | 1 |
| D 16 or D 36 with KK, SS and Spout Holders, complete..... | | 4.60 | 6 | 4 |
| Spring on Main Axle..... | | .30 | | 3 |
| Spring for Regulating Feed Gate, D 12..... | | .15 | | 1 |
| Spring for Spout..... | | .10 | | 1 |
| Washer for Spout, Special..... | | .05 | | 1 |
| Spring Cotter for Spout..... | | .05 | | 1 |
| Belt for Feeding Fertilizer..... | | 4.00 | 3 | 3 |
| Chain for Driving Belts..... | | .60 | 1 | 8 |
| Chain for Driving Belts Agitator on No. 14, No. 16 and No. 17 Distributers..... | | .90 | 1 | 5 |
| Chain for Driving Belts Agitator on Nos. 13, 13 A, 13 B and 24 Distributers..... | | .50 | | 11 |
| Single Tree Bar..... | | 1.10 | 2 | 15 |
| Single Tree Bar with S 1 and S 2 complete..... | | 1.60 | 3 | 8 |
| Iron Shafts for No. 14 Distributer, each shaft..... | | 3.00 | 12 | 4 |
| Iron Shafts for No. 14 Distributer, with E 16, each shaft..... | | 3.35 | 12 | 8 |
| Wood Shafts for No. 14 Distributer, with Britchen Fastener, each shaft..... | | 6.00 | 11 | |
| Tongue for No. 16 Distributer, each piece..... | | 5.50 | 10 | 7 |
| Wheel for Nos. 13, 13 A, 13 B, 14 and 24 Distributers, Model 1906..... | | 6.50 | 20 | 8 |
| Wheel for No. 14 Distributer, Model 1907..... | | 6.00 | 26 | 8 |
| Wheel for No. 16 Distributer..... | | 7.00 | 27 | |
| Wheel for No. 16 and No. 17 Distributers, Model 1906..... | | 7.00 | 30 | |
| Neck Yoke, No. 16 and No. 17 Distributers..... | | 2.00 | 5 | 7 |
| Chain for Evener No. 16 and No. 17 Distributers..... | | .60 | 1 | 5 |
| Double Trees for No. 16 and No. 17 Distributers..... | | 6.00 | 13 | |
| Bolt with Thumb Nut for Regulating D 12..... | | .15 | | 2 |
| Staple Bolt for Iron Shaft..... | | .15 | | 3 |

Repair Parts for McWhorter Nos. 13, 13A, 13B, 14, 16, 17 and 24 Fertilizer Distributers—Continued


| REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|--|-----|--------|--------|-----|
| | | | LBS. | OZ. |
| Staple Clip for Tongue..... | | \$0.20 | | 5 |
| Bolts in Back Ends of Wood Shafts..... | | .15 | | 5 |
| Bolts in Back Ends of Tongue..... | | .15 | | 5 |
| All other Bolts, etc..... | | .10 | | 1 |
| Spring Cotters for D 12, each..... | | .05 | | 1 |
| Seat for No. 16 and No. 17 Distributers..... | | 2.00 | 4 | 1 |
| Wrench | | .60 | | 15 |

Repair Parts for McWhorter Nos. 11 and 12 One-Horse Fertilizer Distributers


| REPAIR PARTS | NO. | PRICE. | WEIGHT | |
|--|-------|--------|--------|-----|
| | | | LBS. | OZ. |
| Concave Washer between Hopper and Shafts..... | E 1 | \$0.20 | | 2 |
| Agitator Finger..... | E 2 | .30 | | 7 |
| Lower Belt Guide..... | E 3 | .20 | | 4 |
| Side Belt Guide..... | E 4 | .80 | 1 | 5 |
| Side Belt Guide..... | E 5 | .80 | 1 | 6 |
| Side Belt Guide..... | E 6 | .80 | 1 | 7 |
| Side Belt Guide..... | E 7 | .80 | 1 | 5 |
| Upper Belt Guide..... | E 8 | .30 | | 7 |
| Upper Belt Guide..... | E 9 | .30 | | 7 |
| Gear for Center of Belt Axle on No. 12 Distributer..... | E 10 | 1.35 | 2 | 4 |
| Gear for Center of Belt Axle on No. 11 Distributer..... | E 10½ | 1.20 | 2 | |
| Gear for Center of Main Axle on No. 12 Distributer..... | E 11 | 1.10 | 1 | 14 |
| Back Roller Sprocket for Belt, R. H..... | E 13 | .85 | 1 | 7 |
| Back Roller Sprocket for Belt, L. H..... | E 14 | .85 | 1 | 7 |
| Holder for Feed Gate Spring..... | E 15 | .20 | | 4 |
| Britchen Fastener on Shafts..... | E 16 | .30 | | 4 |
| Fastener for Draw Ring..... | E 19 | .30 | | 4 |
| Draw Ring..... | E 20 | .30 | | 4 |
| Agitator Finger..... | E 21 | .30 | | 7 |
| Box for Main Axle..... | E 24 | .50 | | 13 |
| Sprocket on End of Belt Axle..... | E 25 | .35 | | 9 |
| Sprocket on Agitator Axle..... | E 26 | 1.10 | 2 | |
| Piece on End of Lever for Thowing Out of Gear..... | E 27 | .20 | | 4 |
| Latch for Gear Lever..... | E 28 | .30 | | 7 |
| Spout Frame for No. 12 Distributer, R. H..... | E 29 | 1.35 | 2 | 4 |
| Spout Frame for No. 12 Distributer, L. H..... | E 30 | 1.35 | 2 | 4 |
| Spout | E 31 | .20 | | 5 |
| Spout | E 32 | .20 | | 5 |
| Spout | E 33 | .20 | | 5 |
| Spout | E 34 | .20 | | 5 |
| Front Roller for Belts..... | E 35 | .50 | | 13 |
| Tightener for Agitator Chain..... | E 36 | .20 | | 4 |
| Draw Ring | E 37 | .30 | | 4 |
| Stay for Spout Frames..... | E 38 | 1.05 | 1 | 12 |
| Casting on which Gear Lever Works..... | E 39 | .50 | | 10 |
| Sprocket on End of Belt Axle for Driving Agitator Axle..... | E 40 | .60 | | 14 |
| Spout Frame for No. 11 Distributer..... | E 41 | 1.60 | 2 | 11 |
| Gear on Main Axle that Drives Belt Axle on No. 11 Distributer..... | E 42 | 1.10 | 1 | 14 |
| Gear that works in E 10½..... | E 42½ | 1.70 | 2 | 14 |
| Bearing for E 40..... | E 43 | .35 | | 8 |
| Casting on which Gear Lever Works..... | E 44 | .45 | | 11 |
| Clutch on Belt Axle that Works in E 10..... | | .35 | | 8 |
| Casting that Holds Stay for E 41..... | E 45 | .30 | | 5 |
| Piece on End of Lever for Throwing Out of Gear..... | E 46 | .20 | | 4 |

Repair Parts for McWhorter Nos. 11 and 12 One-Horse Fertilizer Distributers—Continued

| | NO. | PRICE. | WEIGHT | |
|---|------|--------|--------|-----|
| | | | LBS. | OZ. |
| Spout Frame for No. 12 Distributer, R. H..... | E 47 | \$1.60 | 2 | 11 |
| Spout Frame for No. 12 Distributer, L. H..... | E 48 | 1.60 | 2 | 12 |
| Arms for Holding E 47 and E 48 on No. 12 Distributer..... | E 49 | .50 | | 12 |
| Clutch that fits E 10½..... | E 50 | .35 | | 8 |
| Collar for Main Axle..... | C 24 | .25 | | 5 |
| Feed Gate..... | D 12 | .50 | | 12 |
| Fertilizer Regulator..... | D 40 | .25 | | 6 |
| Collar for Belt on Agitator Axles..... | D 42 | .20 | | 4 |
| Wheel Hub..... | VV | .80 | | 11 |
| Spout Pins for Holding E 31, E 32, E 33 and E 34 to E 29, E 30, E 41, E 47 or E 48.. | | .05 | | 1 |
| Washers for Spout, Special (2)..... | | .05 | | 1 |
| Cotter Key for Spout..... | | .05 | | 1 |
| Spring for Spout..... | | .10 | | 1 |
| Spout Holders, complete, 1 Spout Pin, 1 Spout Spring, 2 Special Washers and 1 Spring Cotter. For holding E 31, E 32, E 33 and E 34 to E 29, E 30, E 41, E 47 or E 48..... | | .20 | | 1 |
| E 29, E 30, E 41, E 47 or E 48 with E 31, E 32, E 33, E 34 and Spout Holders, complete..... | | 3.20 | 3 | 8 |
| Belt for Feeding Fertilizer..... | | 4.00 | 3 | 13 |
| Spring on Belt Axle for Throwing No. 12 Distributer in Gear..... | | .25 | | 2 |
| Spring on Belt Axle for Throwing No. 11 Distributer in Gear..... | | .25 | | 2 |
| Spring for Regulating Feed Gate (D 12)..... | | .15 | | 1 |
| Chain for Driving Agitator..... | | .40 | | 7 |
| Shafts (2).....each | | 3.00 | 12 | 4 |
| Shafts with E 16.....each | | 3.35 | 12 | 8 |
| Rod for Connecting E 47 and E 48..... | | .55 | 1 | 6 |
| Rods for Connecting E 29 and E 30..... | | .30 | | 7 |
| Stay for E 41..... | | .50 | | 5 |
| Wheels (2).....each | | 4.50 | 11 | |
| Wrench..... | | .60 | | 15 |
| Bolt with Thumb Nut for Regulating D 12..... | | .15 | | 2 |
| Staple Bolt for Holding E 24 on Wheel Standards..... | | .15 | | 3 |
| All other Bolts, etc..... | | .05 | | |

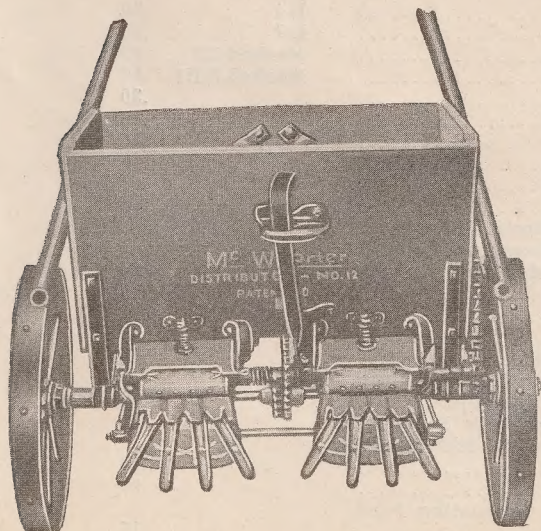 

No. 12

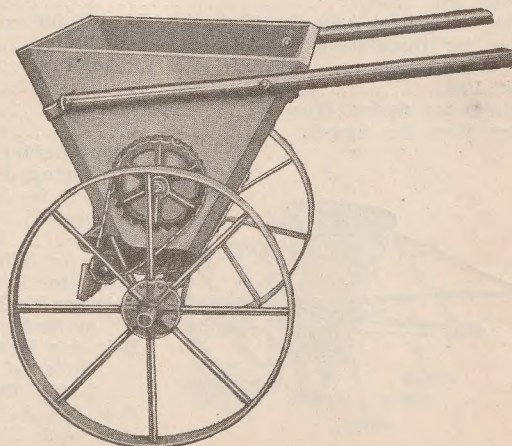 


No. 11

Repair Parts for McWhorter Old Style and No. 21 Fertilizer Distributers

REPAIR PARTS

| | NO. | PRICE. | WEIGHT | |
|---|-------------|--------|--------|-----|
| | | | LBS. | OZ. |
| Spout Frame for Old Style Distributer..... | AA | \$2.80 | 4 | 12 |
| Spout Frame for No. 21 Distributer..... | B 8 | 2.80 | 4 | 12 |
| Casting Covering Front of Feed Belt..... | BB | 1.65 | 2 | 13 |
| Grip, Left Hand Outside..... | C | .25 | | 6 |
| Axle Box, R. H..... | D | .35 | | 8 |
| Grip, Right Hand Outside..... | E | .30 | | 7 |
| Grip, Right Hand Inside..... | F | .30 | | 7 |
| Grip, Left Hand Inside..... | G | .25 | | 6 |
| Axle Box, L. H..... | H | .25 | | 6 |
| Belt Sprocket, L. H. for Old Style Distributer..... | I | .15 | | 3 |
| Belt Sprocket, L. H., for No. 21 Distributer..... | B 7 | .15 | | 3 |
| Prop Holder..... | J | .15 | | 3 |
| Spout, Left Hand..... | KK | .30 | | 8 |
| Front Axle for Belt for Old Style Distributer..... | L | .45 | | 12 |
| Front Axle for Belt for No. 21 Distributer..... | B 4 | .45 | | 12 |
| Belt Guide, L. H. for Old Style Distributer..... | N | .20 | | 4 |
| Belt Guide, L. H. for No. 21 Distributer..... | B 3 | .20 | | 4 |
| Belt Guide, R. H. for Old Style Distributer..... | O | .20 | | 4 |
| Belt Guide, R. H., for No. 21 Distributer..... | B 2 | .20 | | 4 |
| Holder for Feed Gate (X)..... | P | .10 | | 1 |
| Hopper Bottom, Front Half..... | Q | 1.40 | 2 | 5 |
| Fork (Z) Clip..... | R | .10 | | 2 |
| Spout, R. H..... | SS | .30 | | 9 |
| Back Axle for Belt for Old Style Distributer..... | T | .50 | | 14 |
| Back Axle for Belt for No. 21 Distributer..... | B 5 | .50 | | 14 |
| Wrench..... | U | .25 | | 3 |
| Hopper Bottom, Back Half..... | W | 1.45 | 2 | 6 |
| Hopper Bottom, Back Half..... | B 10 | 1.60 | 2 | 11 |
| Roller with Rivet and Cotter for B 10..... | B 9 | .15 | | 3 |
| Feed Gate..... | X | .55 | | 14 |
| Belt Sprocket, R. H. for Old Style Distributer..... | Y | .30 | | 7 |
| Belt Sprocket, R. H. for No. 21 Distributer..... | B 6 | .30 | | 7 |
| Fork for Throwing Out of Gear..... | Z | .25 | | 5 |
| Gear Sprocket Clutch..... | L 4 | .30 | | 7 |
| Gear Sprocket..... | L 7 | .35 | | 8 |
| Trigger for Throwing Out of Gear..... | Marked III | .15 | | 2 |
| Ferrule for Trigger..... | Marked IIII | .10 | | 1 |
| Spring on Wheel Axle for Throwing In and Out of Gear..... | | .30 | | 2 |
| Spring for Regulating Feed Gate (X)..... | | .15 | | 1 |
| Spring for Spout..... | | .10 | | 1 |
| Spout Pin..... | | .05 | | 1 |
| Washers for Spout, Special..... | | .05 | | 1 |
| Cotter Key for Spout..... | | .05 | | 1 |
| Spout Holder, complete: 1 Spout Pin, 1 Spout | | | | |
| Spring, 2 Special Washers and 1 Cotter | | | | |
| key, for holding KK and SS to AA or B 8 | | | | |
| Hopper..... | | .20 | | 1 |
| Wheel..... | | 2.80 | 5 | 12 |
| Axle for Wheel..... | | 5.00 | 11 | 9 |
| Chain for Driving Feed Belt..... | | .45 | 1 | 3 |
| Belt for Feeding Fertilizer with Bars Open | | .60 | | 13 |
| at Ends for Old Style Distributer..... | | | | |
| Belt for Feeding Fertilizer with Links at | | 4.50 | 5 | 2 |
| Ends of Bars for No. 21 Distributer, | | | | |
| Model 1905..... | | 4.50 | 5 | 2 |
| Bolt for Axle..... | | .20 | | 5 |
| Bolt with Thumb Nut for Regulating Feed | | | | |
| Gate (X)..... | | .15 | | 2 |
| All other Bolts, etc..... | | .10 | | |

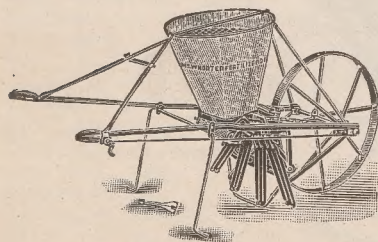 

No. 21 Hand Distributer